

# Concrete Spacer with Wire



- Concrete spacer has been developed to prevent corrosive agents from reaching the reinforcement steel through cracks and pervious concrete, when concrete structures are exposed to a wide range of conditions such as soil, seawater, stored chemicals or the atmosphere. This cover is also necessary to protect the reinforcement steel against a rapid rise in temperature and subsequent loss of strength during a fire. Concrete Spacer meets the demands for covering the reinforcement steel, as required by industrial standards.
- Concrete spacers are little concrete parts which are used to position the rebar on right place with the right cover.
- Square Concrete spacer with wire.

Model	Cover	Bar Size	Std Pkg ( PCS )
SCS 20	20 MM	Free	250
SCS 25	25 MM	Free	250
SCS 30	30 MM	Free	200
SCS 35	35 MM	Free	200
SCS 40	40 MM	Free	200
SCS 50	50 MM	Free	150
SCS 60	60 MM	Free	100
SCS 65	65 MM	Free	100
SCS 75	75 MM	Free	100